
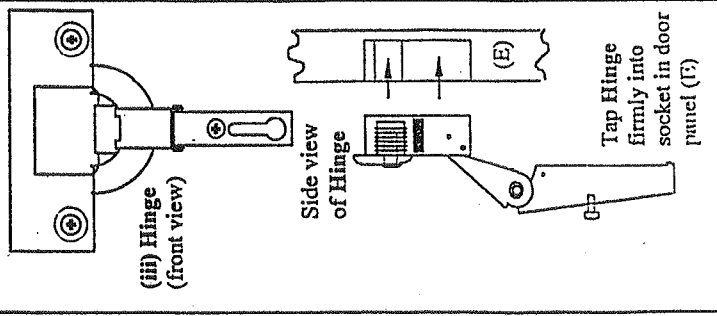
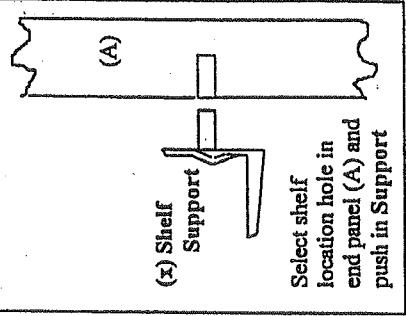
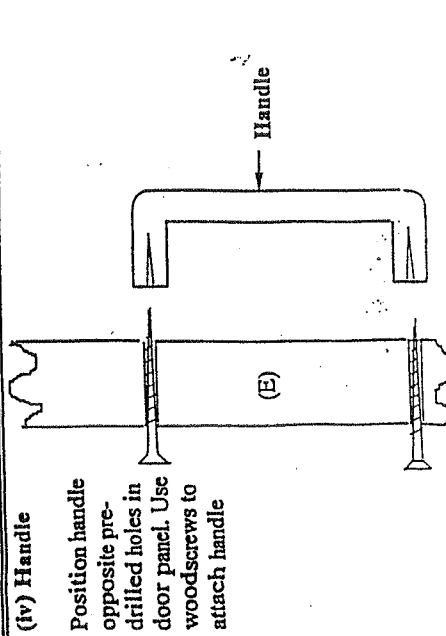
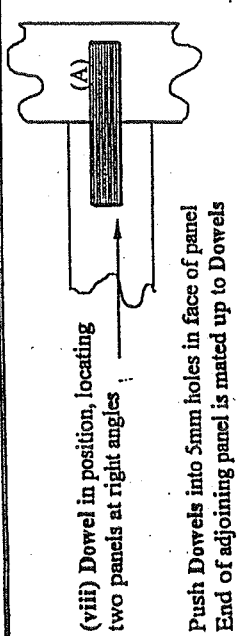
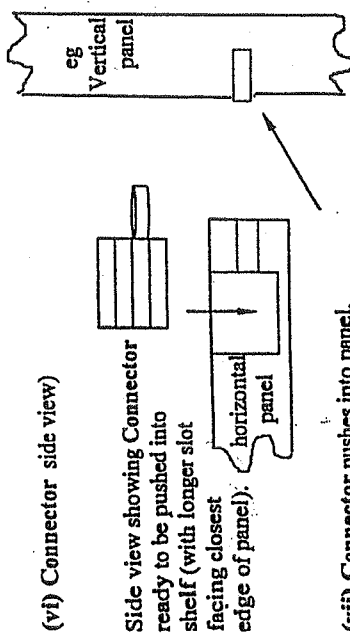



IDENTIFICATION & FITTING OF HARDWARE COMPONENTS

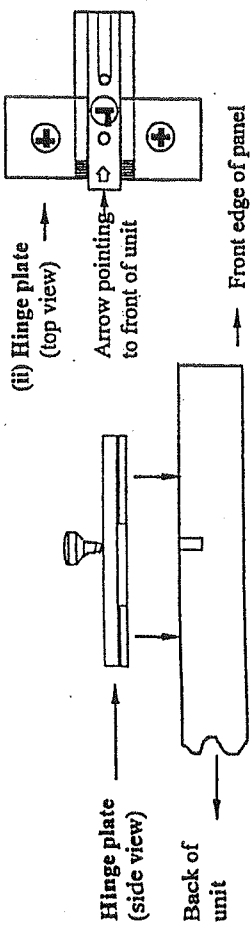

SIDE PANEL - HINGE AND SHELF PLACEMENT


1. Place Connectors as per Diagram 1 for the top and bottom shelves

Diagram 1. Shelf, top view

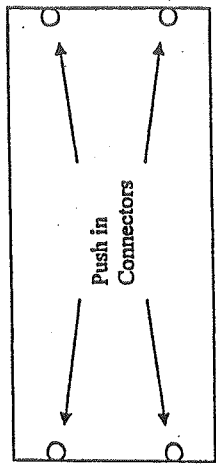

2. Fit shelves and hinge plates as indicated on Diagram 2

Diagram 2. Sample of left hand side panel (mirror image for right hand panel)

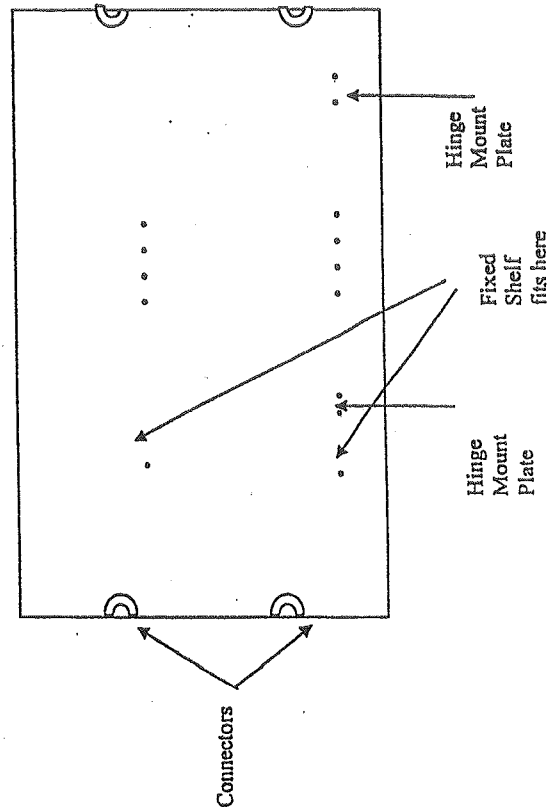

MICROWAVE TROLLEY

Congratulations on your purchase of this quality cupboard. Carefully read the assembly instructions and do not discard them until the unit has been assembled. A description of hardware components is also enclosed and this should be referred to, particularly if this is your first attempt at this type of unit.

1. Check the contents of the hardware pack against the numbers shown in the hardware list.
2. On a hard, smooth surface (preferably NOT a carpet) lay the panels flat with their drilled surfaces facing upward.
3. Identify the arrow on each Hinge Plate and make sure it is facing towards the front of the unit. Position over pre-drilled holes close to the front edge of the side panels (A). Screw into position.
4. Push the connectors into the holes on the inside face of the Side panels (A), and the Shelf (F).
5. The unit is now ready to assemble. Start with one of the Side panels (A) on its edge and the Shelf (F), (the shelf has the connectors facing down). Push the panel in place and tighten up the screws. PLEASE MAKE SURE THE PANELS ARE PUSHED TIGHTLY AGAINST THE SIDE PANELS BEFORE TIGHTENING THE SCREWS.
6. The opposite Side panel (A) can be fitted in the same way as previously. The Bottom panel (C) and the Top panel (B) can now be fitted. Note that the Top is 20mm wider than the bottom.
7. The back can be nailed in place making sure the unit is perfectly square.
8. The shelf supports push into the holes on the inside of the unit, at your desired height. The shelf (D) then sits on top of the supports.
9. With the doors (E) lying flat gently tap the hinges into their sockets, and attach with the screws provided.
10. Attach the doors (E) to the unit (in the open position, with the hinges on the inside) by fitting the hinges over the hinge plates and sliding the doors in towards the unit. Tighten the retaining screws.
11. Adjustment can be made to the door gap using the screw mounted on the hinge.
12. Fix the handles in the position on the doors (E) using the screws provided.
13. Attach the Castors to the underneath of the cabinet. The unit is now complete.

Hardware required for assembly

- | | |
|--------------------|-------------------|
| 4 x hinge plate | 4 x hinge |
| 2 x handle | 4 x handle screw |
| 1 x bag of nails | 8 x hinge screw |
| 1 x set of castors | 4 x shelf support |
| 12x connectors | |

